 



BLUETOOTH® TAP TIMER

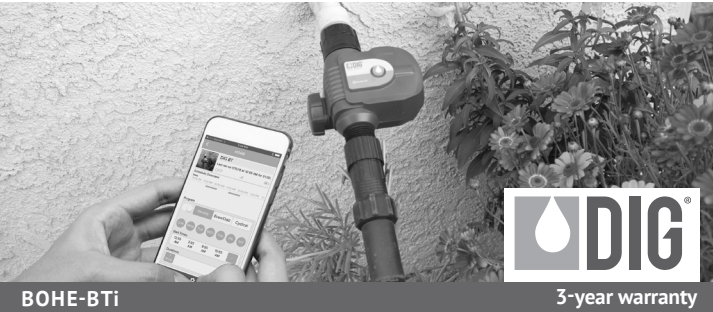

3-year warranty

BOHE-BTI

 COMPONENT IDENTIFICATION

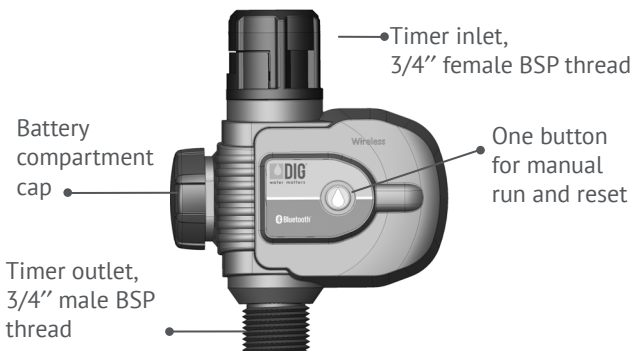


Operating pressure: .68-8.3 BAR (68 KPA-827 KPA) • For irrigation use only
Flow rate: 14 L/H - 53 L/H • IP64 Certified

INSTALLING THE BATTERY

Two AA alkaline batteries are recommended

 - Remove the battery cover - keep the battery compartment dry - install two AA batteries (See orientation).
- Place the battery inside the compartment and reinstall the battery cover.

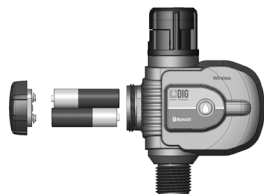

MAINTENANCE

- Remove and clean the screen washer on the inlet side of the timer every few months.
- Remove the batteries if the timer is not used for an extended time.
- In freezing conditions, uninstall the timer and bring it indoors to prevent damage.



 
HOW TO INSTALL

Attach the timer inlet to the outdoor faucet/spigot, turning clockwise - hand tighten only. Connect a drip irrigation system or a garden hose to the timer outlet.



Timer inlet: 3/4" female BSP thread with screen washer


Timer outlet: 3/4" male BSP thread

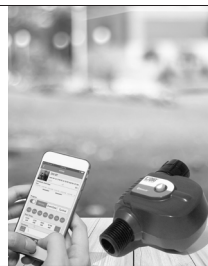

A DOWNLOAD DIG BTT APP



 
B SCANNING SCREEN

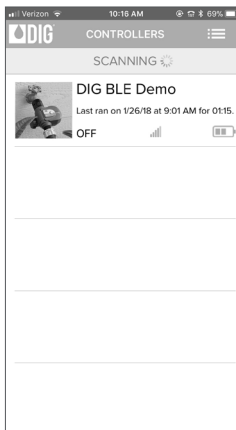


Tap on the screen to connect to your timer.

New controllers appear as "BT Hose End Timer".


You can access [Connection History](#) and [Contact Us](#) through the information icon  in the top right corner of the screen.

 
C HOME SCREEN

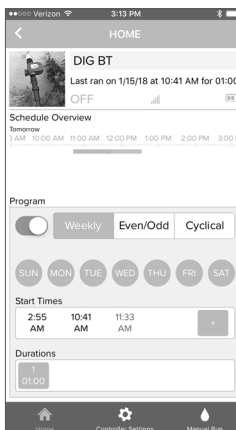


Once connected, the [Home](#) screen will appear. On this screen, you can program the schedule using days of the week, even/odd, or every x days and then proceed to the start times and duration. The schedule overview will update instantly with everything you program.

 
D SETTINGS SCREEN

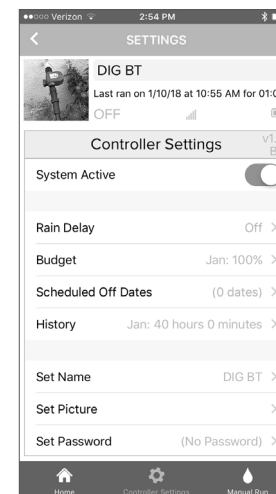


The timer's [Settings](#) screen contains everything else needed to fully control your irrigation system. It can be reached by selecting the [Controller Settings](#) button  on the bottom of the screen.

 E MANUAL RUN SCREEN

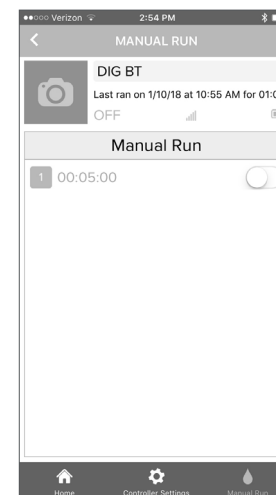

The [Manual Run](#) screen allows for manual operation of the timer. It can be reached by selecting the [Manual Run](#) button  on the bottom right of the screen. Modify the duration by tapping on it and start and end the run by tapping the button to the right.

The timer can also manually run from the timer itself by tapping the water droplet button . The duration of this manual run is equal to the duration of the scheduled program. The button can also be used to end any watering.